
INSTALLATION INFO FALUN


AN AUSTRALIAN OPERATION/INSTALLATION GUIDE IS SUPPLIED ON THE PACKAGING OF THE HEATER. PLEASE READ AND KEEP THIS DOCUMENT.

- Heater must always be transported upright.
- Unpack with care, particularly units with tile or stone finish.
- Rivet the Euro Fireplaces compliance plate to the low back of the heater.
- Rivet the 'Burn Hardwood Only' plate below the ash tray.
- Take out all packaging cardboard spacers from above the baffle (2 x) plate and from near the grate.
- Remove the glove and fresh air intake collar from the ash pan.
- If the fresh air intake is to be connected, attach the fresh air intake collar to the fresh air intake outlet.
- The doors automatic closing spring can be disconnected with wire cutters or carefully removed with needle nosed pliers.
- **A 6" cast iron Spigot supplied by Euro must be used (if not already on the heater) the spigot must be bolted onto the heater using a glass seal between the spigot and the body of the heater.**
- A 6" / 8" / 10" Flue must be used (available from Euro Fireplaces) The first section of the stainless-steel flue must go **CRIMP DOWN** into the spigot (not over it!).
- Euro Fireplaces require a minimum of 4 metres of flue from the heater. For every pair of 45 deg bends (if required) the overall flue length should be extended by one full length.
- The original paint for flue touch-ups are Stove Bright Metallic Black, Satin Black or Titanium.
- Original heater touch-up paint is available from your stockist.
- Correct clearances are shown on the other side of this sheet
- Remove the temporary transport handle.
- Attach the stainless-steel handle (inside the ash drawer) and make sure the washers are in the right position as pictured.

EURO FIREPLACESS PROVIDE STRICT INSTALLATION GUIDELINES, AND DO NOT ACCEPT RESPONSIBILITY FOR ANY INSTALLATION IT HAS NOT BEEN DIRECTLY INVOLVED IN

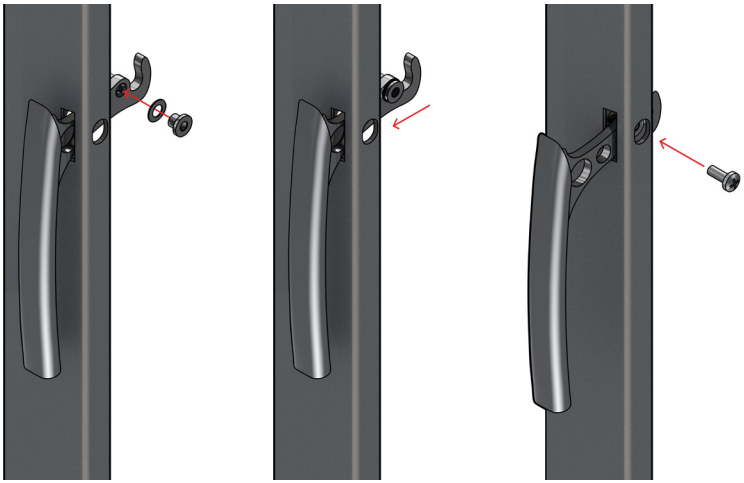

Clearances				
A	B	C	D	E
250	300	250	300	200

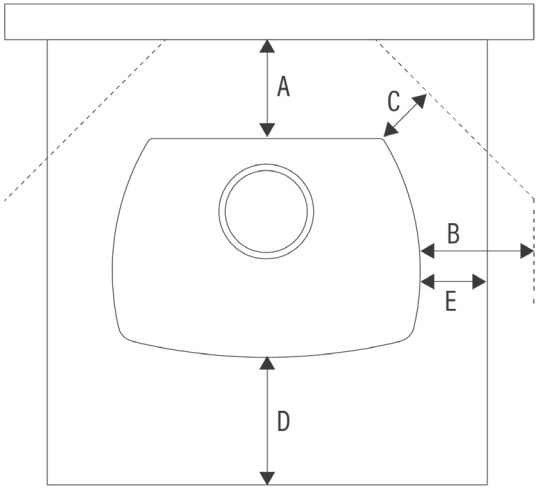

Upon installation, please give the heater a general check-up to make sure no damage occurred during transport and the glass is firmly in place. Please assess the house for gaps under outside doors. If so please advise the client that those gaps must be covered during operation of the heater.

euro fireplaces