INSTALLATION INFO MILANO

AN AUSTRALIAN OPERATION/INSTALLATION GUIDE IS SUPPLIED ON THE PACKAGING OF THE HEATER. PLEASE READ AND KEEP THIS DOCUMENT.

- Heater must always be transported upright.
- Unpack with care from the timber crate.
- If a trolley is used tilt the heater from the FRONT using a protective towel between the trolley and the heater.
- Rivet the Euro Fireplaces compliance plate to the low back of the heater.
- Rivet the 'Burn Hardwood Only' plate below the ash tray.
- Insert rope and heater cooking plate.
- Attach splash back.
- Attach 5" T piece to receive 5" flue or 6" T piece to receive 6" flue.
- **A Milano top flue requires a spigot available from Euro Fireplaces for either a 5" or 6" flue connection.**
- A 6"/ 8"/10" Flue must be used (available from Euro Fireplaces) The first section of the stainless-steel flue must go **CRIMP DOWN** into the t-piece (not over it!).
- Euro Fireplaces require a minimum of 3.6 metres of flue from the heater. For every pair of 45 deg bends (if required) the overall flue length should be extended by one full length.
- The original paint for flue touch-ups are Stove Bright Metallic Black, Satin Black or Titanium.
- Original heater touch-up paint is available from your stockist.
- Correct clearances are shown on the other side of this sheet.


EURO FIREPLACESS PROVIDE STRICT INSTALLATION GUIDELINES, AND DO NOT ACCEPT RESPONSIBILITY FOR ANY INSTALLATION IT HAS NOT BEEN DIRECTLY INVOLVED IN

Back Flue Clearances				
A	B	C	D	E
425*	540	475	300	200

* including 200mm flue junction

Top Flue Clearances				
A	B	C	D	E
300*	650	375	300	200

* The rear wall clearance can be reduced to 175mm from the rear of he appliance to the Combustible wall if the 180° x 900mm double rear flue shield is extended to ceiling.

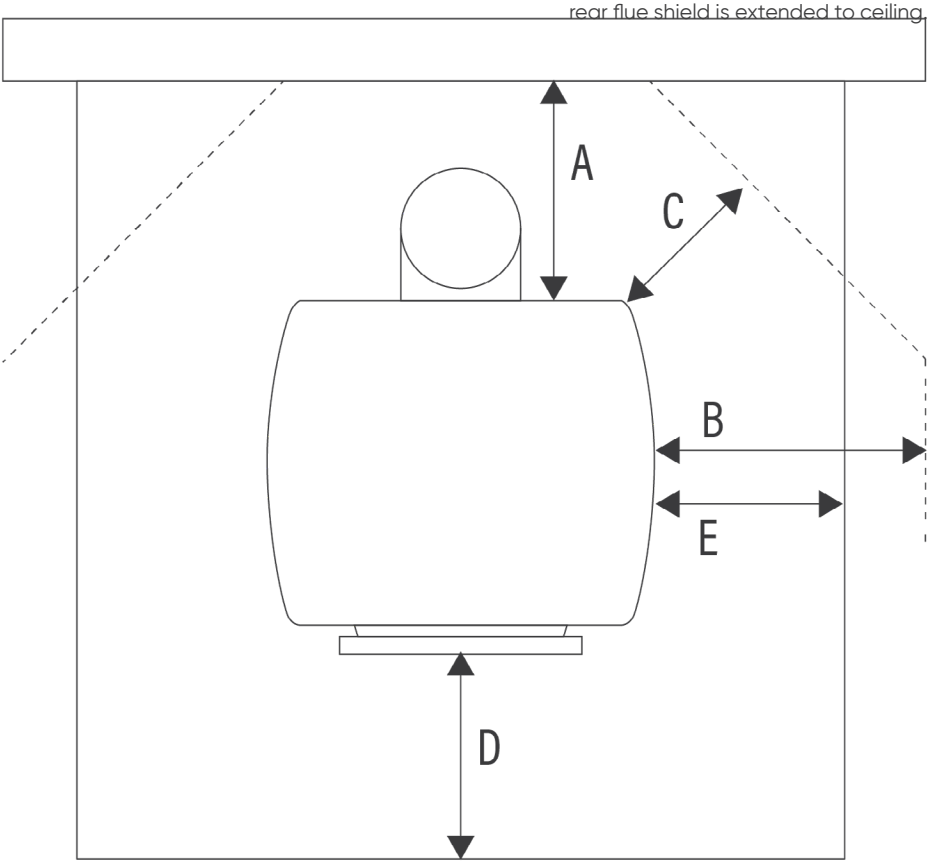

Upon installation, please give the heater a general check-up to make sure no damage occurred during transport and the glass is firmly in place. Please assess the house for gaps under outside doors. If so please advise the client that those gaps must be covered during operation of the heater.

euro fireplaces