Decoflame Technical Information

WESTMINSTER DS™

WITH DENVER F6 BURNER



This impressive bioethanol fireplace is the perfect solution when challenged with the task to restore an old, reduant fireplace or merely the opening remaining in a chimney breast from a previously model.

It is a one-piece biofiorelplace easing the installation. It comes complete with a metal frame, insert, basket and the Denver F6 burner.

The frame and decor can be manufactured in different finish and materials but comes standard in black/black or black/brushed stainless steel.

FRAME STANDARD FINISH

Black | Brushed stainless stell

FRAME OPTIONAL ON REQUEST


RAL | Polished stainless steel | Polished copper | Brushed copper | Polished brass | Brushed brass

TECHNICAL INFORMATION

Capacity:	4L
Burning time:	7-20 hours (Depending on flameintensity)
Heat effiency:	1.2 - 3.2 kW/h
Net weight:	Depends on material
Minimum room size:	64m^3
Burner:	Denver F6 720
Flametray:	500mm long in aluminium
Materials:	Aluminium and steel
	Hardened diamond clear glass 80mm high, 6mm
Finish:	Powder coated black
Standard finish frame	Powder coated black
	Brushed stainless steel (BSS)
Power supply:	220V - 240V / 50 Hz
Fuel:	Use bioethanol at 96.5 - 97.5%

FEATURES

- e-Ribbon™ technology
- Safety Sensors / Safety Chamber
- Fuel Level Indicator / Flame Level Indicator
- Remote control included
- External Pump included
- Bluetooth / App
- 6 flame levels
- No chimney required - no smoke, ash or soot

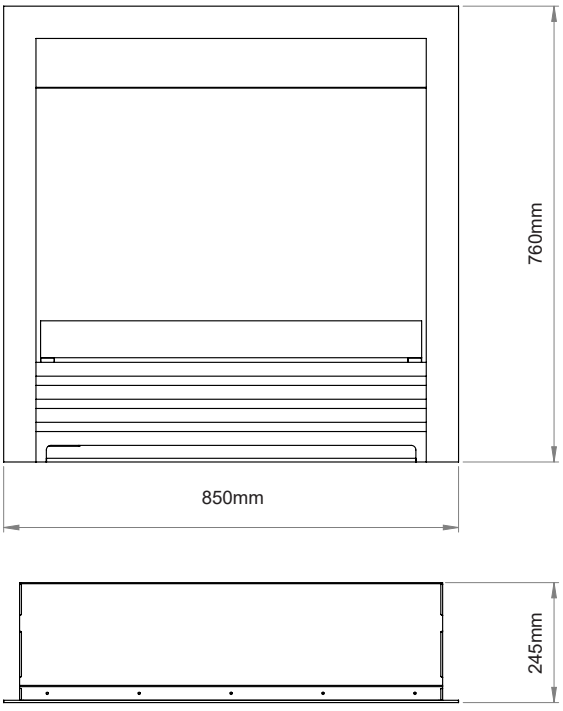


BIOETHANOL

For use and information about bioethanol, please visit our webiste decoflame.com.

(Please be aware that bioethanol is essential to a proper use and gurantee of your product).

Subject to typing errors, typos and technical faults, production- and product tolerances. Decoflame ApS reserves the right to make changes without notice. We refer to Decoflames Ordinary Terms and Conditions.

DENVER F6 BURNER

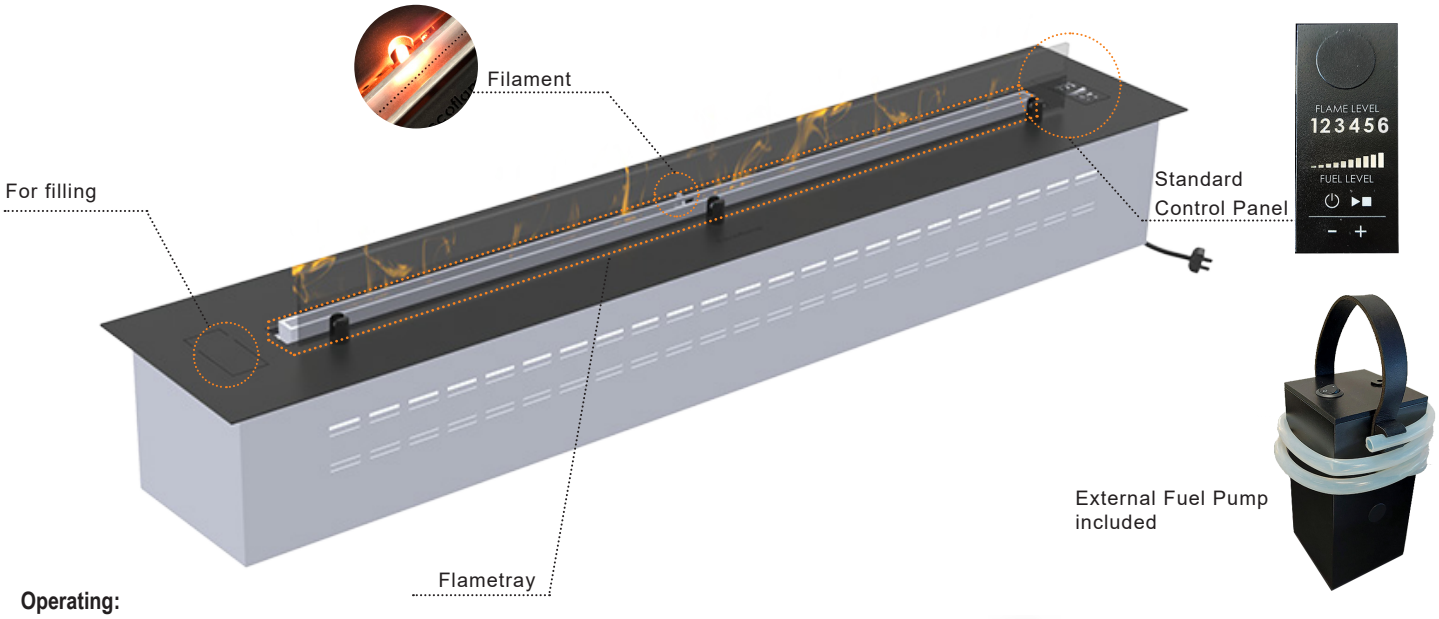

Operating:

Step 1	Turn on the electronics of your Denver F6™ by pressing the ⏻ button.
Step 2	Fill in the right amount of bioethanol in the fuel tank by verifying the level on the fuel level indicator.
Step 3	To ignite the fireplace: Press the ▶■ button on the control panel. After about 3 minutes, the first flames will appear around the centre of the flame tray.
Step 4	When the filament no longer is red/glows (approx. 10 min) it is possible to adjust the flames.
Step 5	To switch off the fire at any time – also during the warming-up phase – press the ▶■ button on the control panel. The flames will disappear within few minutes.





Use the supplied remote control or download the Decoflame App to your mobile device for controlling the biofireplace.

Installation of Decoflame App to the Denver F6 burner

App Store

Google play

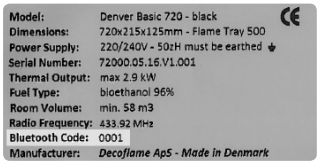


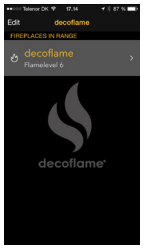


1. Download and install the Decoflame App corresponding to your smart device's operating system. For more information go to: decoflame.com.

2. In order to pair your fireplace with your smart device, start the fireplace by pressing the 'ON' button.
Start the App and choose your fireplace.
Insert the code from YOUR rating plate, like the one highlighted above.


3. Once your device is paired, the fireplace should be visible on the app. You are now able to change the name of the fireplace.
Note: You are able to pair more than one fireplace like described in the step nr. 2 and give them different names.

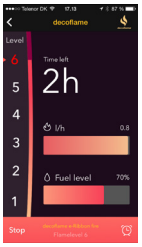

4. Once you have selected your fireplace, you can turn it on by pressing 'START'. If the fireplace has already been turned on using the control panel, you can now monitor the fuel level and the consumption.

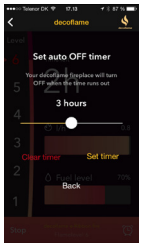

5. For the 'Turn Off Timer' press the clock icon in the lower right corner. To adjust the remaining time, slide the dot to the left and right and select 'SET TIMER'. The remaining burning time can be changed by repeating the above mentioned steps. To cancel the timer select 'CLEAR TIMER'.

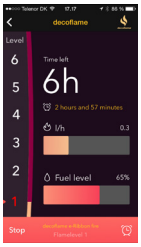

6. For adjusting the flame intesity, select the desired level on the left side of the screen. (1-lowest, 5+ECO Wave or 6-highest depending on the model chosen). Should there not be enough fuel for the selected burning time - the fireplace will shut down automatically.
Select 'STOP' to turn off the fireplace.

Subject to typing errors, typos and technical faults, production- and product tolerances.
Decoflame ApS reserves the right to make changes without notice. We refer to Decoflames Ordinary Terms and Conditions.